

# Updating Algo Firmware

## Step-by-step guide

1. Navigate to the Algo's IP address on your network. If you do not know the IP address, press the **reset** button on the device. The current IP address will be read out. Press the reset button again to stop the readout.
2. Log in to the Algo using the password, "**algo**" if not yet provisioned with NocTel, or "**8675309**" if it has been provisioned.
3. Click the **System** tab, then the **Firmware** tab.
4. In the online upgrade section click **Check**. The system will check for any updates and will return a URL if there is one.
5. Open the URL to download the new file.
6. Chose the **From Local Files** method in the **Customer Upgrade** section.
7. Click **Choose File** and navigate to the firmware file you downloaded.
8. Click **Upgrade**.



### Update Time

Updating the firmware can take up to 30 minutes and the device may reboot several times



### Algo's Firmware Page

You can download specific Firmware for Algo products here: <https://www.algosolutions.com/firmware-downloads/>

## Related articles

- [Connecting an Algo 8301 to an Analog Paging System](#)
- [Use Cases: Algo 8301 Paging Adapter and Scheduler](#)
- [Use Cases: Algo Speaker & Visual Alerters](#)
- [Common Paging Issues](#)
- [Updating Algo Firmware](#)